

Installation Sheet

Astro FR Door Viewer

Revision 2 - 30th March 2026



Astro HS Door Viewer

Tools & Equipment

- Measuring Block
- Carpenters Pencil
- Drill Hole Saw



Introduction


A door viewer with extra security features and designed for a wider range of users than standard door viewers. The special prism optics built into this secure door viewer allow the viewer to be stood well back from the door and provide other special features.

Please read this instruction carefully before installing and using the device. The function and any possible guarantee of the device might be affected if you do not follow the instructions. Pass the instructions to the end user for future reference.


WARNING – REPLACE THE DEVICE IF ANY PART IS BROKEN, TORN OR MISSING

Installation

Main Components:

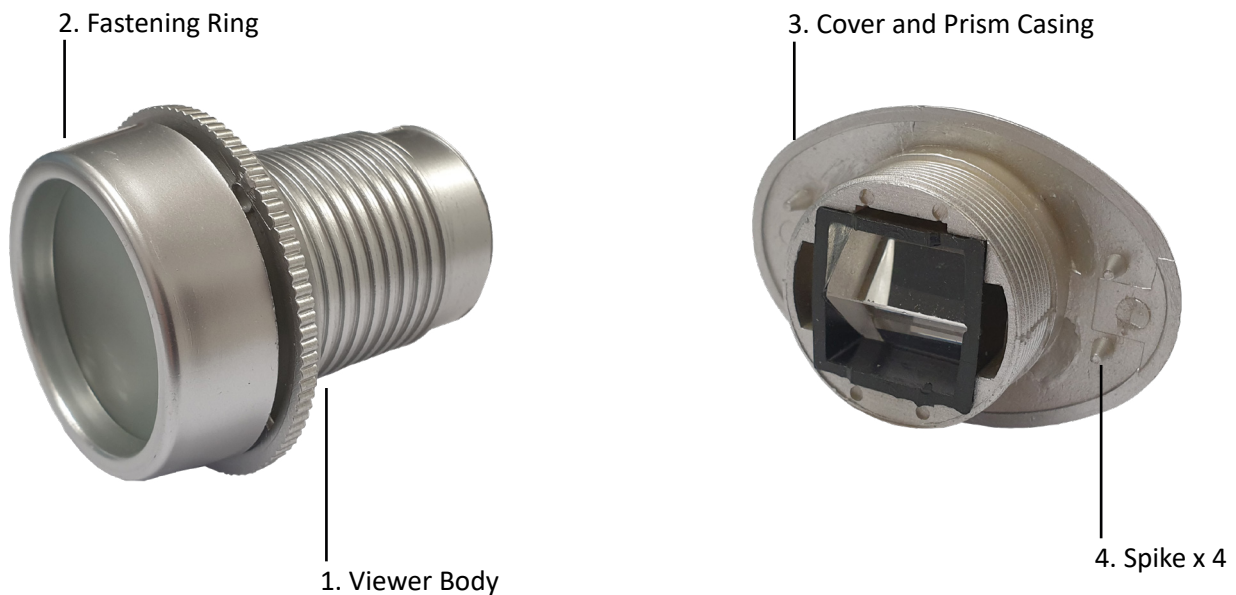

1. Put the sticker label on the door at a desired place where the door viewer is to be positioned. Be sure that the label is stuck on the outside of the door and is kept horizontal with reference to the level line given on the label. Drill a hole with its centre indicated on the sticker label by using the hole saw. Then make four 5mm-deep small holes with positions marked on the label by using a 3mm-diameter nail (see Figure 1).
2. Turn the component 3 counterclockwise till it is off the viewer body and cover the hole with the component 3 from outside your door. Make sure it is at the central position of the hole and the oval cover on the component 3 is horizontal. A pressure is then made to force the spikes into the wooden surface of the door (see Figure 2).
3. Put the component 1 and 2 into the hole from inside your door and turn them clockwise till they are firmly connected to the component 3 on the other side of the door. Turn the component 2 clockwise to fasten this door viewer and the door together (see Figure 3).

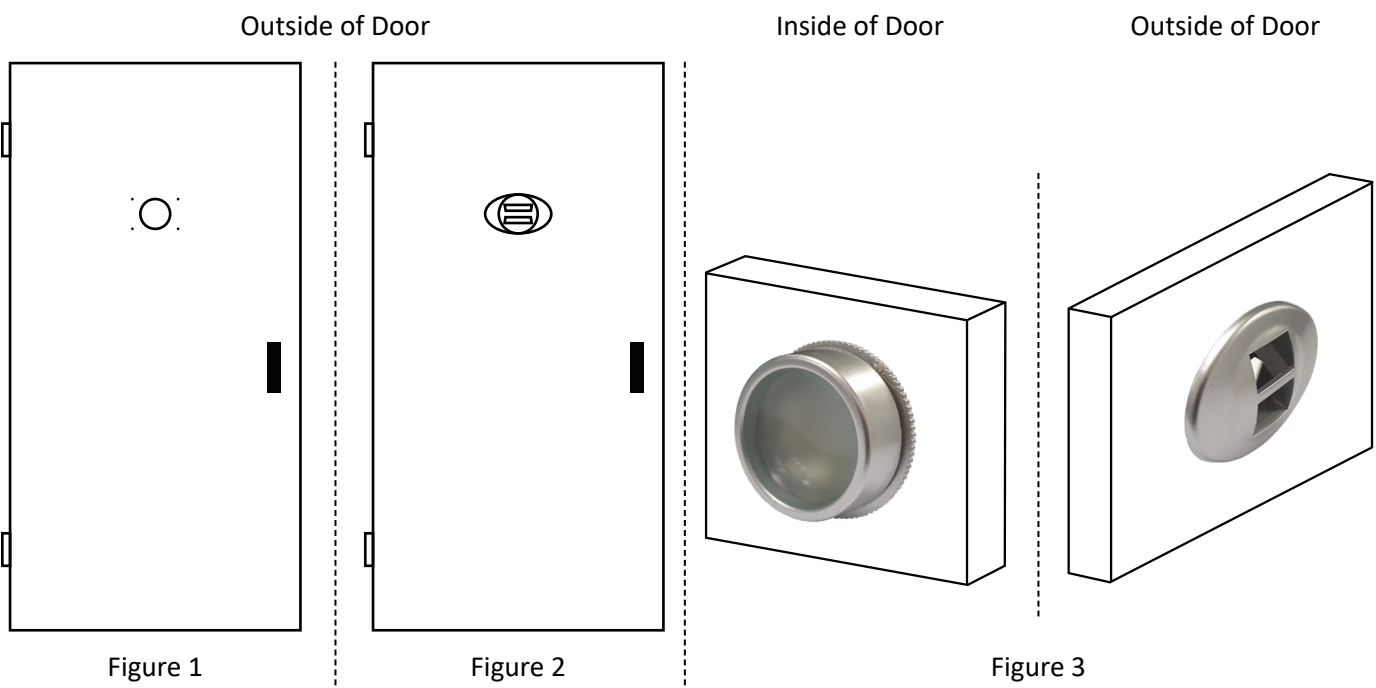

Storage and disposal

Astro HS Door Viewer should be stored indoors. No shelf life is given as this product will not deteriorate in storage. For further information on installation requirements please contact the technical team on: tel [01329 844 500](tel:01329844500) or email sales@astroflame.com

As part of our policy of ongoing improvements, we reserve the right to modify, alter or change product specifications without giving notice. Product illustrations are representations only. All information contained in this document is provided for guidance only, and as ASTROFLAME (FIRE SEALS) LTD has no control over the specific application or installation methods of the products, or of the prevailing site conditions, no warranties expressed or implied are intended to be given as to the actual performance of the products mentioned or referred to, and no liability whatsoever will be accepted for any loss, damage or injury arising from the use of the information given of products mentioned or referred to herein.

The above information to the best of our knowledge is true and accurate and based upon current test data and is supplied for your guidance only. Customers should satisfy themselves to the suitability of the product based on the products limitation of applications and that the product is fit for purpose for their intended use and no guarantee is given or implied since the conditions of actual use are beyond our control. ASTROFLAME (FIRE SEALS) LTD, disclaim any liability for loss, damage or other expense arising from the use of information, data or products mentioned or referred to and reserve the right to change any details or specifications without notice. If you are in any doubt as to the suitability of this product for your intended application please contact our technical team on 01329 844500 or email sales@astroflame.com and we will contact you.